


Instruction

Straight Picket Fence

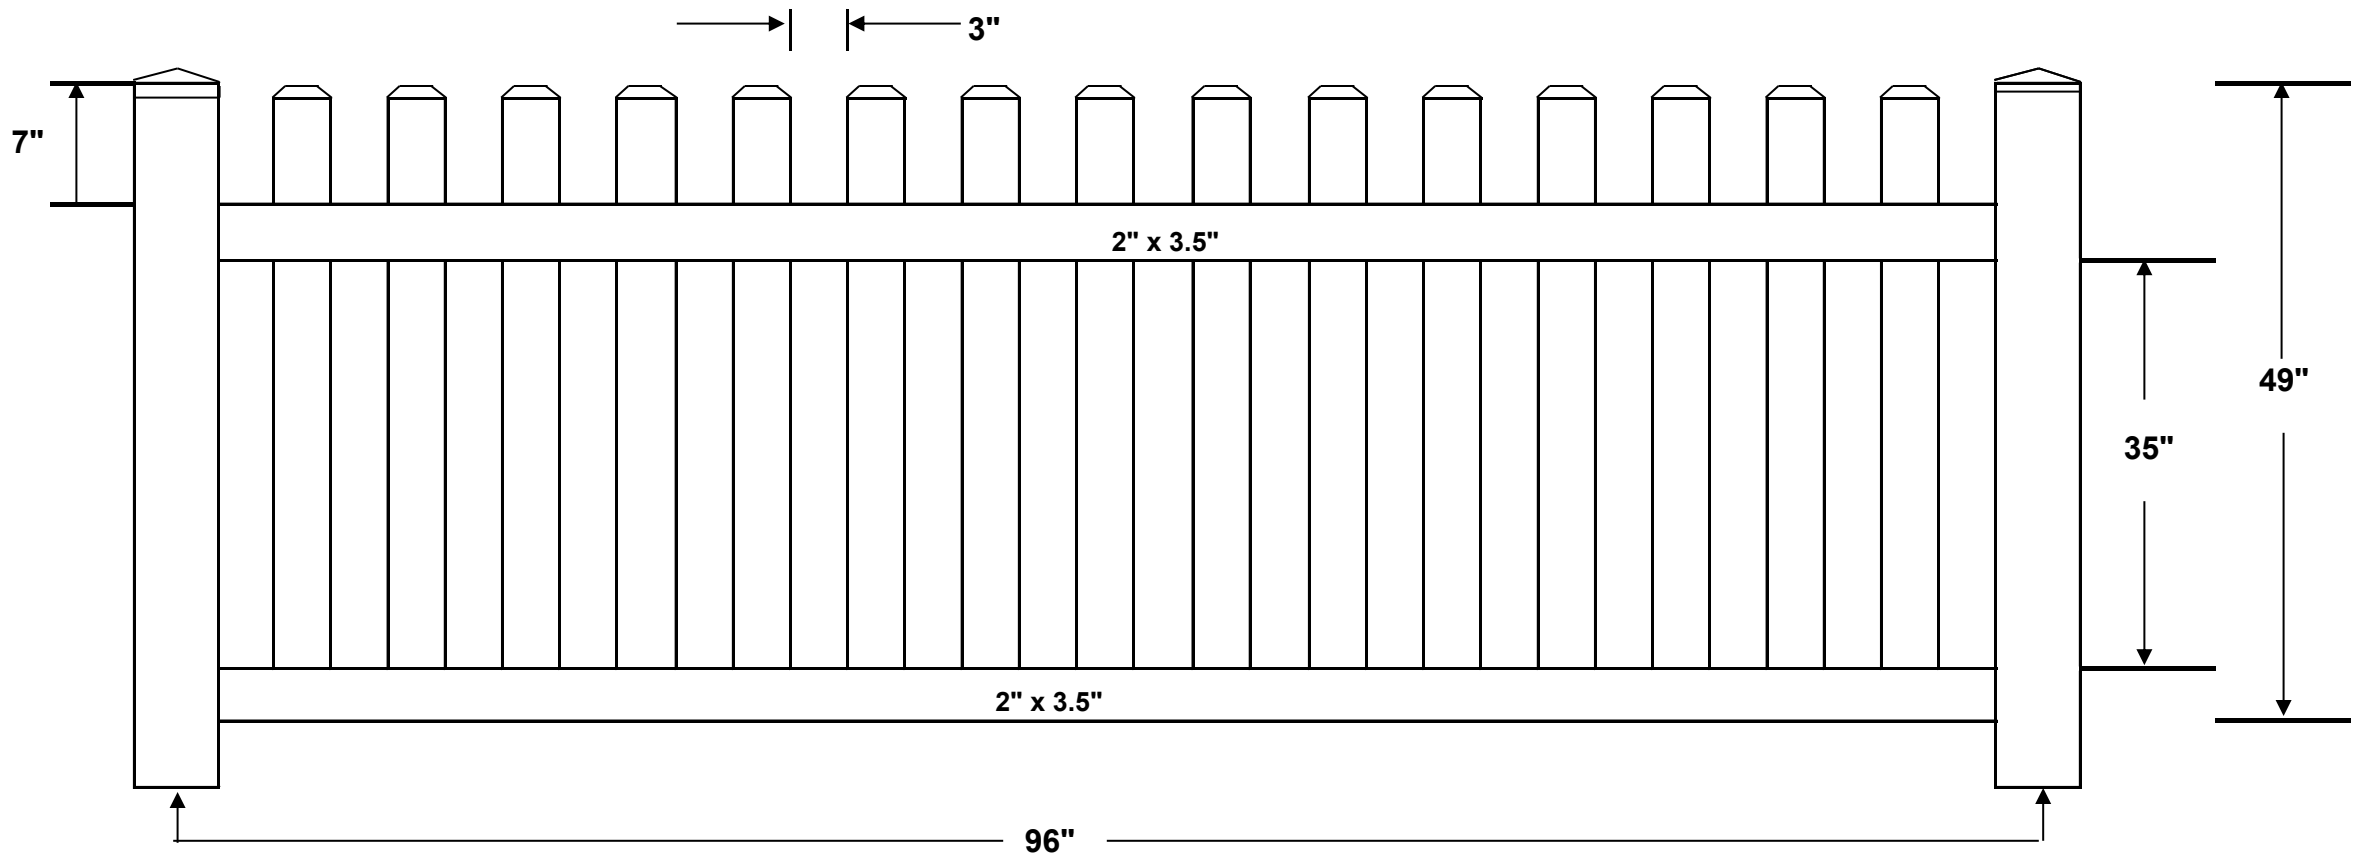

- 1 Install Post in concrete at 96" center line from post to post. The lower route hole is normally 2" above ground level
- 2 The bottom rail has route holes on only one side and has a metal insert for an 8ft. Wide span. Install bottom rail (with holes up) into one post and slide all the way in, making clearance to pull rail back into other post. Locking tabs will lock into both post.
- 3 The top rail has two set of route holes. One side is cut larger than the other. The larger holes will be down. Install top rail the same as the bottom, inserting all the way into one post and pulling back into the other.
- 4 Install pickets, slide picket into the top rail with locking tab first all the way through and into the bottom rail. Continue until all pickets are installed.
- 5 Install picket and post caps. You can glue the caps into place with (clear PVC glue) Optional